


NO. 3 KASTRUP



VERSION 1



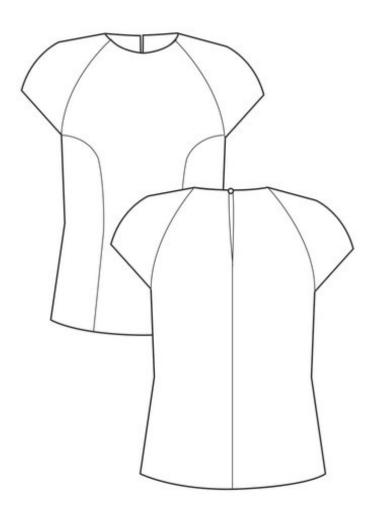










CUTTING FABRIC:

On each pattern piece, you will find a capital letter. On the cutting layout plan, you will find the same capital letters so that you can easily see which pattern pieces to use for the view you have chosen.

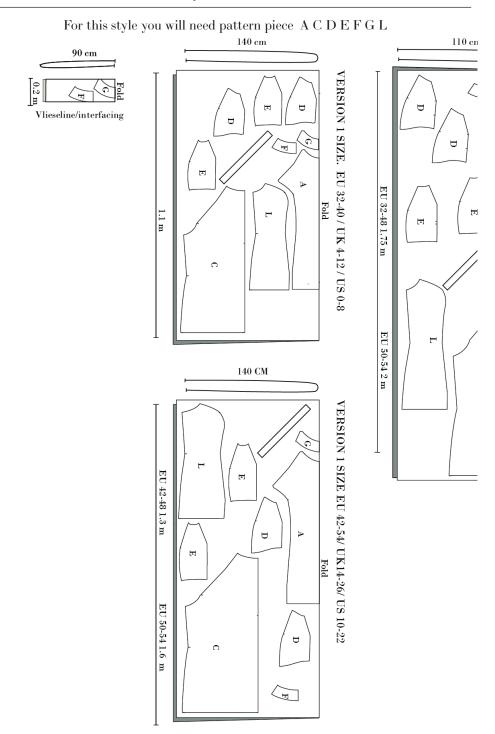

NOTE! CUT PATTERN PIECE E & D X2



SEWING

NB! THE PATTERN HAS 1 CM SEAM ALLOWANCES INCLUDED, UNLESS OTHERWISE NOTED

- 1. Cut all your pieces in fabric and interfacing
- 2. Press the interfacing to the pattern piece F & G.
- 3. Overlock to finish the long edges on your facings (F and G) RIGHT SIDE

WRONG SIDE







INTERFACING

SEW BLOUSE

- 4. Sew front-side pieces together with center front pieces, right sides together. Pin the pieces according to the notches indicated on the pattern.
- 5. Overlocker to finish the seams. Press the seam allowance towards the front.
- 6. Overlock side seams and center back seam, separately.
- 7. Sew center back seam, right sides together, up to the notch. Press the seam open.
- 8. Sew front neck facing and front piece together in the neckline, with right sides together.
- 9. Sew back neck facing and back piece together in the neckline, with right sides together












10.Understitchthe facings and clip notches to the seam allowances*

11. Flip the neck facing onto the right side of the back piece and sew it together at the center back with 1 cm.

12. Sew the slit opening at the center back. Fold 0,5 cm x 0,5 cm and stitch.


13. Turn and press the back nicely.

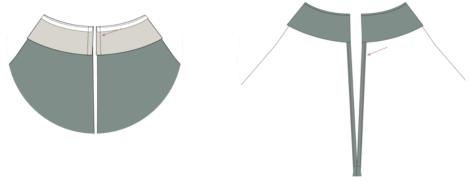

SEW THE SLEEVES


13. Sew the back and front sleeves together in the shoulder seam, right sides together. Now you have 4 pieces in total.

14. Paired the sleeves two by two, right sides together. Sew in the bottom line. Understitchen one side, be sure to make one for the right side and one for the left side.

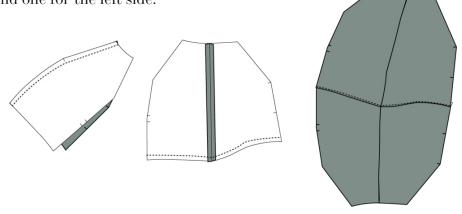

15. Sew the sleeves together at the neckline, right sides together.

16.Understitchthe and clip notches to the seam allowances

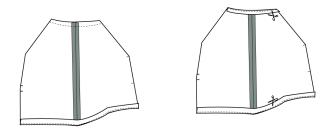




NOTE! Now You Have Two Doubled Layered Sleeves.

- 17. Sew the front sleeves, by placing the sleeve at the neckline with right sides together. Fold the facing over the sleeve and sew. Cut corners. See guide
- 18. Turn the sleeve and neck facing and press.





- 19. Repeat this on the back sleeve.
- 20. Sew the side seam, right sides together. Press the seam open.
- 21. Place the bias tape to the armscye, right sides together, from the front neckline and all the way to the back neckline. sew with 0.7 cm fold the bias tape around the raw edge and finish with a topstitch. See a guide here.

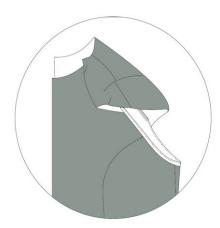



- 22. Overlock the bottom and hem with a catch stitch or a narrow hem
- 23. Sew in a small button for closing, and make a hand knitted loop.